


FMT1254

Classic Panelmaster

Product Instruction Manual



# Main Features

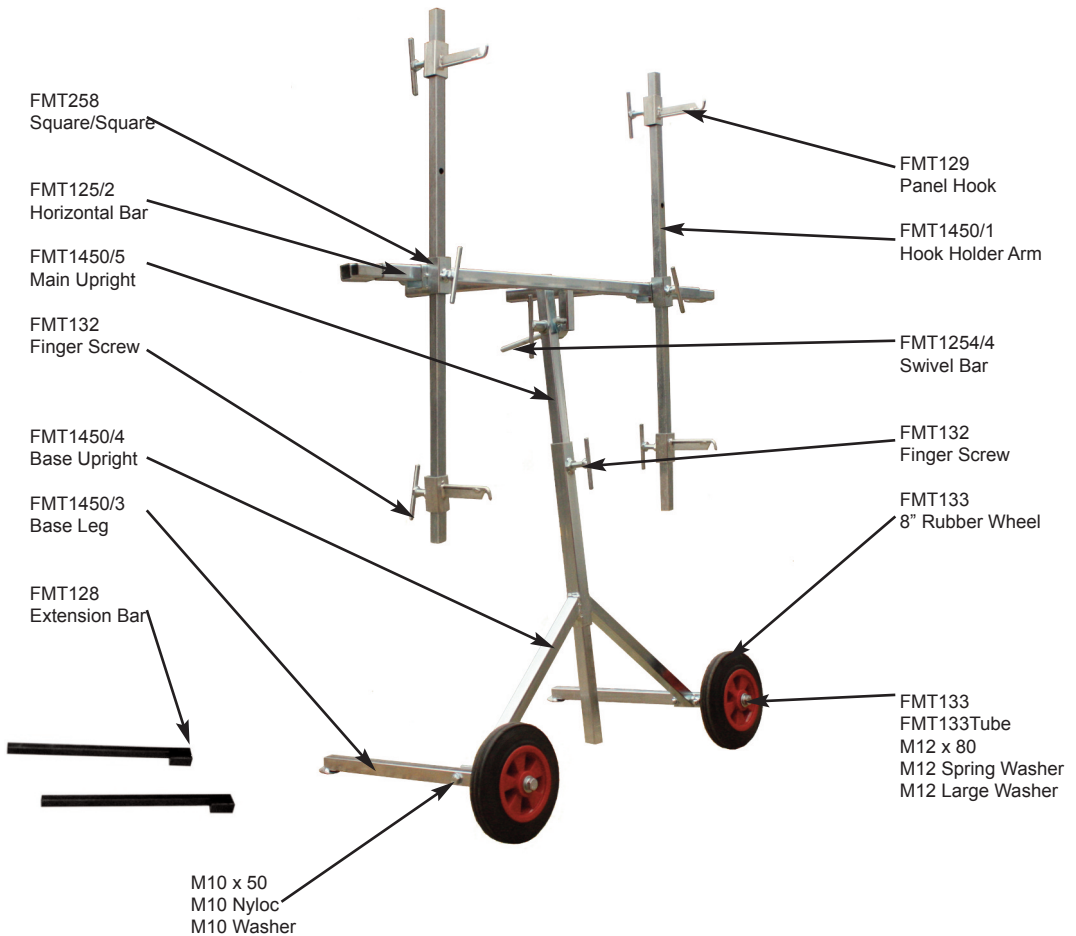

- 1 Tandem wheelbase gives a stable platform to work on and provides a "lean back" profile for easier spraying.
- 2 Features a long lasting 90° rotation mechanism for a long working life and less downtime.
- 3 Rolls on large 8" Rubber Tyres which give good grip and will not get caught in floor grids or door thresholds.

# Parts List

FMT1450/4	1	Base
FMT125/1	1	Main Upright
FMT125/2	1	Top Piece
FMT1450/3	2	Base Leg
FMT128	2	Short Extension Bar
FMT1450/1	2	Hook Holder
FMT133	2	200mm Wheel

Parts Bag		
Containing -	2	FMT258/1 Square on Square
	2	M12SW M12 Spring Washer
	4	M10X50 M10 x 50 Set Screw
	2	M12X80 M12 x 80 Set Screw
	8	M10WS M10 Washer
	4	M10N M10 Nyloc
	9	FMT132 Finger Screw
	4	FMT129/1 Panel Hook
	2	M12W M12 Washer
	2	FMT133/TUBE Wheel Insert
	1	FMT1254/3 Steel Pin
	1	FMT1254/4 Swivel Bar
	1	FMT131/1 T-piece
	1	FMT131/2 Eyebolt

## General Safety Instructions

- 1 DO NOT use this stand if any part is broken or damaged.
- 2 DO NOT use this stand as a climbing frame or hop-up.
- 3 DO NOT allow children or unauthorised persons to use this stand.
- 4 DO NOT use this stand near any electrical source.
- 5 ALWAYS clean paint overspray from all moving or adjustable parts to ensure a good grip and long life.
- 6 ALWAYS be aware of those around you and likewise be aware that your own actions may have a direct effect on those around you.
- 7 DO NOT use this stand if under the influence of drugs, alcohol or intoxicating medication.
- 8 ALWAYS use this stand in a clean, tidy and safe environment, always ensure that the stand is position on level, stable ground.
- 9 Ensure that the floor is not wet or slippery before you use this stand. Always wear non-slip footwear.
- 10 ALWAYS wear the appropriate PPE, avoid wearing loose clothing, rings and jewellery and tie long hair back.
- 11 Due to the nature of this product, there may be sharp edges on some components of this stand. It is therefore strongly recommended that suitable gloves are worn when using this stand.
- 12 This stand must not be used in anyway that compromises the stability or integrity of the stand itself or puts the operator at risk. Doing so will invalidate the warranty and void any claims resulting from damage to property or personal harm.
- 13 Always store this stand in a dry, secure environment.
- 14 Always position the FMT129s in the way shown on the image to the left. Fitting them in any other way will dramatically reduce the strength of the stand's grip in the panel. This could lead to damage to the panel and could also harm the operator. Claims relating to damage of property or personal injury will be voided if the FMT129s are fitted incorrectly. The warranty will also be invalidated.


Fast Mover Tools

T: 01582 661993 F: 01582 667100 E: sales@fastmovertoolsuk.com

W: [www.fastmovertoolsuk.com](http://www.fastmovertoolsuk.com)


# Swivel Mechanism

Fig. 1

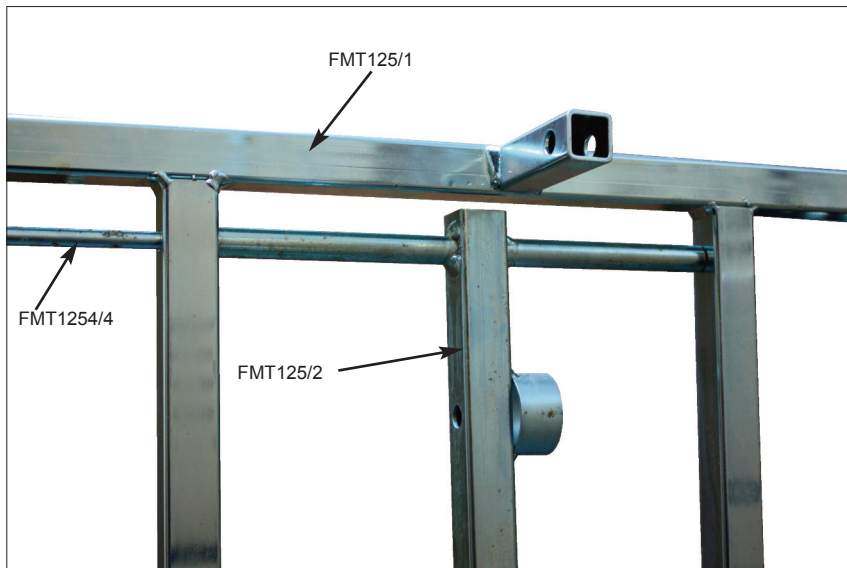

Slide FMT1254/4 through holes in the FMT125/2 and then the FMT125/1 so that it is firmly held in place and the FMT125/2 is able to turn freely.

Fig. 2

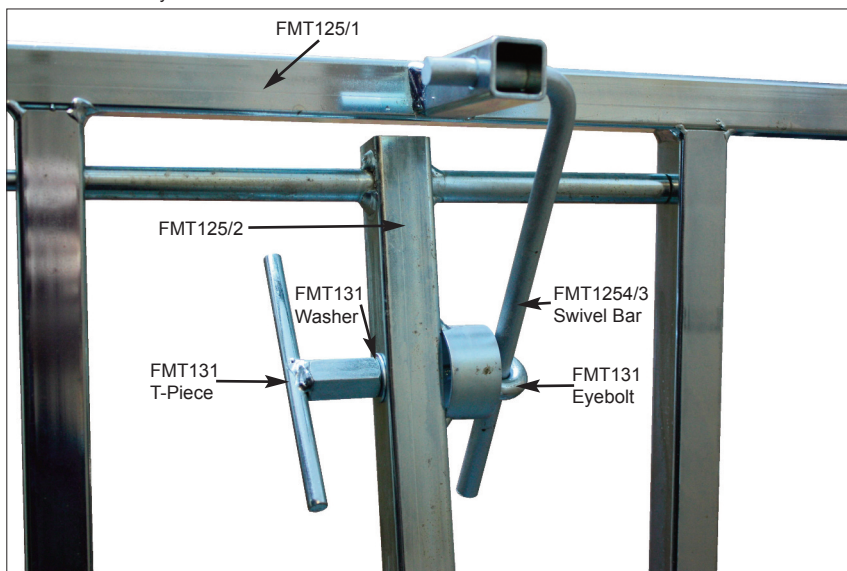

Slide the FMT1254/3 through the FMT131 eyebolt then insert both parts into their respective sockets simultaneously. Secure the FMT131 with the T-piece and washer. The angle of rotation can now be set and fixed.